



Split Heaters

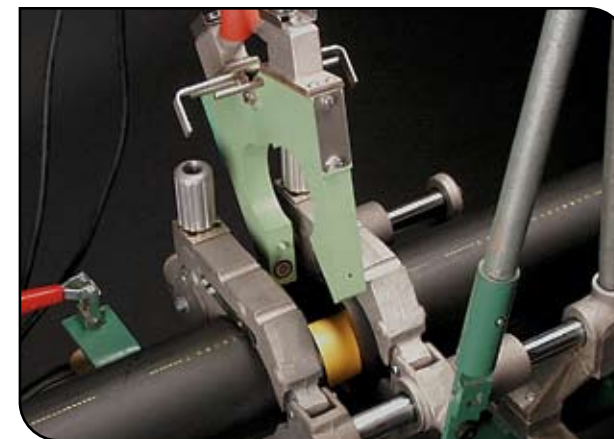

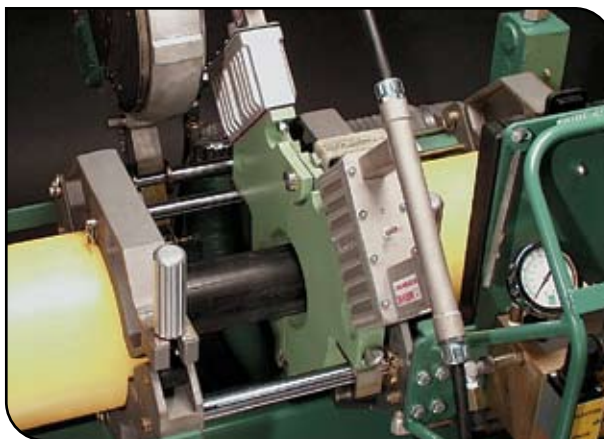



McElroy split heaters are used for fusing the outer pipe of a dual containment system. Split heaters open enough to go around the inner pipe so that an outer pipe can be heated and fused. All heaters have durable anti-stick coatings.

Note: The first character of the heater name (i.e. 2 x 8) represents the maximum IPS size of the inner pipe for the heater application. The second character represents the maximum IPS size of the outer pipe. Outer pipe wall thickness is limited to a maximum of DR 11.




Heater	Model No.	Machine	Heater ID	Heater OD	Fuseable Sizes	Input	Output	Weight
--------	-----------	---------	-----------	-----------	----------------	-------	--------	--------

Split Heaters

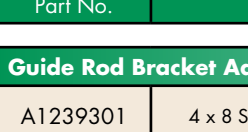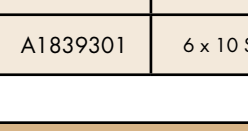	2 x 4	425601	No.14	3.188"	5.375"	(1 x 4), (2 x 4)	120V	800Watt	7.5 Lbs. (3.4Kg)
	2 x 8	829801	No.28	3.875"	8.625"	(2 x 5), (2 x 6)	120V	1574Watt	28.5 Lbs. (13Kg)
	3 x 8	829501	No.28	5.00"	10.25"	(2 x 6), (3 x 6), (2 x 7), (3 x 7), (2 x 8), (3 x 8)	120V	1754Watt	32 Lbs. (14.5Kg)
	4 x 8	829901	No.28/No.412 *	6.00"	10.25"	(2 x 8), (3 x 8), (4 x 8)	120V	1754Watt	32 Lbs. (14.5Kg)
	6 x 10	1238801	No.412/No.618 *	7.75"	12.5"	(4 x 10), (5 x 10), (6 x 10)	240V	2200Watt	35 Lbs. (16Kg)
	8 x 14	1239201	No.618	9.937"	14.75"	(6x12), (7x12), (6x14), (7x14), (8x12), (8x14)	240V	2800Watt	40.5 lbs. (18.4Kg)

* Guide rod bracket kits required for adaptation to this size machine. (4 x 8 Split Heater requires separate power supply if used in No.412 fusion machine)

Part No.	Description
Guide Rod Bracket Adapter Kits	
A1239301	4 x 8 Split Heater to No.412 Fusion Machine.
A1839301	6 x 10 Split Heater to No.618 Fusion Machine.

Part No.	Description
Insulated Heater Sling	
 SW08601	2 x 4 Heater Sling

Part No.	Description
Insulated Heater Stands	
821802	2 x 8, 3 x 8 & 4 x 8 Heater Stand
1234202	6 x 10 Heater Stand
1835102	8 x 14 Heater Stand